

BEARCAT

B-C Bearcat Scanner BC200XLT

GARRETT

G-SS Supper Scanner

GENERAL ELECTRIC/MACOM/ERRICSON

GE-A PE, PY, or MVP Series
GE-AS PE, PY, or MVP Series with Star Encoder
GE-B PR Series
GE-C MPR, MPX, or MPS Series
GE-D KPC, KPC, Panther 500
GE-I PI Series, HT10
GE-ITT PI Series or HT10 with touch-tone keypad
GE-J P700 Jaguar, P5100, P7100, P7200
GE-JA P7300 with battery BT-023406-005, BT-023406-003 or BT-023406-001
GE-JB P5100 with battery BT-010942-001
GE-JC P700Pi with battery HMA2104-Lip
GE-JR Ruggedized version of P7100
GE-K MRK(Model PK3ZGT), MRK II
GE-KU MRK with the large 17mhz battery
GE-L LPE200
GE-M Monogram Series
GE-P PCS Series
K-W PCS Series with battery with bumps on back
GE-R KR103
K-A MPA Series
M-BS MPD, PLS, MTL, or MPA Series
MPD-G MPD with high capacity battery
M-PR P5400 with battery BT-023406-005

(clip has a notch)

HARRIS

H-X200 Unity XL-200 with battery 14035-4010-01REV
H-X100 Unity XG-100P with battery BT-12082-0300-01
H-X75 Unity XG-75 with battery BT-023406-005
H-X25 Unity XG-25 with battery HNPA9-Lip

HENRY

HCS CS-15, S-15
H-A Tempo FMH-12, FMH-15S

HYTERA

H-PD PD782 with battery BL2006

ICOM

ICU	ICU-2, ICU-H6, ICU-H12
ICA	H-10, U-10
LMR-G	ICU-H18, ICU-H19, ICU-U16, ICU-U19
ICB	IC-F20-2
ICC	IC-F30, IC-F40
IC-T	IC-T7H with battery BP-170
IC-TU	IC-T7H with battery BP-173
IC-F11	IC-F11
IC-F14	IC-F14, IC-F24 with battery BP232
IC-F31	IC-F3161
IC-F43	IC-F43GT with battery BP232
IC-G	IC-F30GS, IC-F30GT, IC-F40GS, IC-F40GT
K-WN	IC-F3GS, IC-F3GT, IC-F4GS or IC-F4GT with battery BP209
IC-F50	IC-F50 with remote microphone & battery BP227
IC-S	IC-F4S
IC-F10	IC-F1000S with battery BP279
IC-F70	IC-F70S and IC-F80 with battery BP235 and BP236
IC-F80	IC-F70S and IC-F80 with battery BP234, IC-F9011
IC-F80K	IC-F70S and IC-F80 with battery BP234 and cut out for push-to-takl button

JOHNSON

J-A	546, 547, 548
J-B	577, 588
J-D	5852, 5861 or 5862 Series
J-DTT	5852, 5861 or 5862 Series with touch-tone keypad
J-DA	8500 or 8560 Series
J-EF	242-5112-210-6A with battery 587-5100-B60
J-F	Falcon 7510, Ascend, 51SL with battery 587-5100-360 or 587-5100 380
J-FA	51SL with battery 587-5100-364
J-FK	5100 with battery 587-5100-362
J-FKP	51SLES with battery M373L4-A
J-F82	51SLES with battery NNTN8299
J-S	Scorpion 5963
LMR-J	Scorpion 5950
J-SI	Avenger SI
M-HU	Avenger
JLX	Challenger LX2442
JZX	Challenger ZX2452
RPX	515-518, 615-618, 620F, Sincronize 10-10
J-V	Viking XRHA83
J-VP	Viking VP600 & VP900 with battery 587-5700-374

KENWOOD

K-W	TK200, TK300
K-WA	TK210, TK230, TK310, TK330
K-WB	TK240, TK320, Tk340
K-WBTT	TK240, TK320, TK340 with touch-tone keypad
K-WC	TK260, Tk280, Tk360, TK380, TK390 with battery KNB15A, TK2180 with battery KNB41NC
K-WCA	TK360G with battery MKNB-15
W-C	TK260, TK360 without touch-tone keypad
KW-C Special	TK3100 with battery KNB15A
V-A	TK280, TK380 with touch-tone keypad & battery KNB-16A, Protalk with battery KNB16A
V-AS	TK-280, TK380 with touch-tone keypad & battery KNB17A
K-WCB	TK272G with Nimh battery KNB21N, TK280 with battery KNB21N, NX300 with battery KNB47L
K-WK	TK360 with battery KNB35Li or KNB57L
K-WD	TK290, TK390, TK480 with battery KNB17A
K-WDA	TK280, TK380, TK290, Tk390 with battery KNB-22N, Open Sky P31-P4, Open Sky P801T
K-WF	TK280, TK380
K-WG	TK2140 with battery KNB24L
K-WH	TK270G, TK272G, Tk372G, TK272, Tk372 with battery KNB15A, Tk2140 with battery KNB26N or KNB25A
K-WHS	TK272G, TK372G with battery KNB20N
K-WI	TK480 with battery KNB16A
K-WJ	TK2180, Tk3180 with battery KNB31A, KNB32N or KNB54N
M-XATT	TK3160 with battery KNB26N
K-WK	TK3160 with battery KNB3Li
K-WL	TK2180, TK3180 with battery KNB33L, Hytera PD782 with battery BL2006
K-WN	TK3200 with battery KNB29N or KNB45L
K-WNL	K2212, TK2312 or TK3312 with battery KNB45L
K-WP	TK5210, TK5310 with battery KNB33L or KNB43L
K-WPL	TK5210, TK5310 with battery KNB33L or KNB43L
K-WPN	TK5210, TK5310 with battery KNB32N or KNB41NC
F-C	TK250, TK350, Tk353 without touch-tone keypad
F-CTT	TK350 with touch-tone keypad, TK2100, TK3100, TK3101
J-D	TK230 with touch-tone keypad
M-HU	TK270, TK370 with touch-tone keypad, Protalk with battery KNB15A
M-H	TK430 with battery KNB9A, Protalk with battery KNB14
M-HBRA	TK2170, TK3170 with battery KNB25A
M-HBR	TK2170, TK3170 with battery KNB35L
K-WR	TK2170, TK3170 with battery KNB26N
K-WS	TK5320 with battery KNB47L
K-W521	NX5200, NX5300 or NX5400 with battery KNB-L1
K-W522	NX5200, NX5300 or NX5400 with battery KNB-L2
K-W543	NX5200, NX5300 or NX5400 with battery KNB-L3
K-NX	NX200 with battery KNB-48L, NX210 with battery KNB-32N or KNB-43, TK5220 or TK5320 with battery KNB-48L

K-NX47 NX200 with battery KNB-47L
K-NXA NX220 with KNB-57L
K-NXL NX210 with battery KNB-33L

KING

K-A 464-501, LPH2023, LPH2142, LPH5023, LPH5141, LPH5142, LPU4141A, LPU4991A, MPH5142, DPHX5102
K-ATT Bendix King WITH A TOUCH-TONE GUARD. Use K-A WITHOUT GUARD
K-WKT KNG-P150 with battery KAA0100, KNG-P400, KNG-P500, KNG-P800
K-B KNG-P150 with battery KAA0101, KNG-P400, KNG-P500, KNG-P800

MAXON

MAX CP Series, CS Series
MAX-A SP2000 Series, TP4800, SP2550, SA1225, SP2580, SL500, 2550SM, SP2850
MAX-B SP120V
MAX-C CP1020
MAX-D SP140U, SP130V2, SP100G
MAX-H Heavy Duty Series, CP0520D, SP5150D
MAX-P SP5000 Series
M-CS CP300, CP310, CP320. CP330, CP340 Series
S-I SP200
ICS SP7000 Series
Y-B HL1500 Series
M-HBR SP1000 Series
MAX-3 SP300 Series

MIDLAND

LMR-A LMR70-030, LMR70-130, LMR70-230
LMR-B LMR70-15, LMR70-150, LMR70-250
LMR-C LMR70-032, LMR70-111, LMR70-152B, LMR70-245DX
LMR-D LMR70-155B, LMR70-255B
LMR-DO LMR70-155B, LMR70-255B with decoder
LMR-F LMR70-153B, LMR70-253B
LMR-G LMR70-154, LMR70-254
LMR-H LMR70-043, LMR70-143, LMR70-243
LMR-I LMR70-145, LMR70-245
LMR-J LMR70-165B, LMR70-265, LMR70-266-16B
LMR-JTT LMR70-165B, LMR70-265, LMR70-266-16B with touch-tone keypad
LMR-K LMR70-9301
LMR-L LMR70-195, LMR70-195-99B
LMR-M LMR70-132B
LMR-O LMR70-165-B48
S-X LMR70-B48
LMR-P LMR70-045-16C

LMR-S LMR70-148B with battery M70B48
MI-A LMR80-150 with battery BP0513

MOTOROLA

M-A HT200
M-A4000 APX4000 with battery PMNN4424AR, NNTN4448AR or NNTN8560
M-A4028 APX4000 with battery NNTN8128BR
M-A4029 APX4000 with battery NNTN8129A
M-A6000 APX6000 with battery PMNN4403A, APX7000 with battery NNTN7035
M-A6021 APX6000 with battery NNTN8921A
M-A6038 APX6000 with battery NNTN7033, NNTN7034, NNTN7035, NNTN7038, NNTN8092
M-A7000 APX7000 with battery NNTN7038 or NNTN7035 (short)
M-A6038 APX7000 with battery NNTN7035 (long)

M-A6000 APX8000 with battery PMNN4033
M-A6038 APX8000 with battery NNTN7034 or NNTN7038
M-B HT210, HT220, Commex II
M-BK HT220 with SP Lock
M-BS MPD, PLS
M-CA HT220 Slimline
M-CAK HT220 Slimline with SP Lock
M-D Director
M-MD HT50, HT90, HT440, Radius P100
M-MT MT500
M-MTID MT500 with Identifier
M-MTIDTT MT500 with Identifier and touch-tone keypad
M-MTTT MT500 with touch-tone keypad
M-MTS MT500 Slimline
M-MX MX300, MX330, MX340, MX350, MX360
M-HT HT600, MT1000, Radius P200, MTX800
STX STX, MX800
STXTT STX, MX800 with touch-tone keypad
GE-I HT10, PI Series
M-P4 PR400 with battery NNTN4497CR
M-CP PR400 with battery NNTN4970A
M-P110 Radius P110
M-S Saber
M-SR Saber-R
M-GP GP300 with battery HHN99628A (high capacity)
M-GPL GP300 with battery HHN9808A or B (low capacity)
M-GPU GP300 with battery HHN8133A or B (ultra capacity)
M-V Visar with battery NNTN7394A (high capacity), Radius P1225
M-VL Visar with battery NNTN7396A(low capacity)

M-RP	Radius P10, P50, Spirit IV
M-RS	SP50
M-RA	Radius SP10, Spirit III, GP68
M-C	HT1000, MT2000, MTS2000, MTX or MTX9000 with touch-tone keypad and battery NNTN7143, JT1000
M-CU	HT1000, MT2000, MTS2000, MTX or MTX9000 with touch-tone keypad and battery NNTN7144
M-H	HT1000, MT2000, MTS2000, MTX or MTX9000 wit out touch-tone keypad, with battery NNTN7143
M-HU	HT1000, MT2000, MTS2000, MTX or MTX9000 without touch-tone keypad, with battery NNTN7144, FLASHPORT
M-HC	Handicom Series
S-H	GP350
M-GTX	GTX
M-R	Raven
M-RA	GP68
M-LT	LTS2000
M-HBR	HT750, HT1250 or HT5150 with or without remote microphone, PR860, HT1550XLS, MTX8250, CP185, BR250 battery HNN9009AR
M-HBRA	HT750, HT1250 or HT5150 with or without remote microphone, PR860 with Impress battery HNN4001 or HNN4003A
M-HBRB	HT750, HT1250 or PR860 with battery HNN9013BR
M-XA	Astro XTS3000 without touch-tone keypad
M-XATT	Astro XTS3000 with touch-tone keypad, STX300R, MT1500, XTS1500, XTS2500, PR1500
M-XATTK	Astro XTS3000 with touch-tone keypad, STX300R, MT1500, XTS1500, XTS2500, PR1500 with a cut out for push-to-talk button
M-XATTS	Astro XTS3000 with touch-tone keypad and battery NTN8610B
M-X5000	XTS5000, XTS5000II, XTS5000III, XTS3000 with battery BZ8299
M-X5000K	XTS5000, XTS5000II, XTS5000III, XTS3000 with battery BZ8299 with cut out for push-to-talk button
M-X5000R	XTS5000R
M-XP	Expo
M-X35	XPR3000, XPR3300 & XPR3500 with battery PMNN4409AR
M-X356	XPR3000, XPR3300 & XPR3500 with battery PMNN4406AR
M-X63	XPR6300 with battery PMNN4066A
M-X65	XPR6500 with battery PMNN4066A
M-X657	XPR6500 with battery PMNN4077A
M-X75	XPR7550 with battery PMNN4409AR
M-CP	CP150, CP200 with battery NNTN4496AR & NNTN4497AR, HT750 or HT1250 with battery HNN9009AR & PR400 with battery NNTN4970A
M-CPX	CP200XLS with battery NNTN4497CR
M-CT	CT250
M-EXA	EX500, EX600 without touchtone keypad & battery JMNN4024
M-EXB	EX500, EX600 without touchtone keypad & battery JMNN4023
M-EXC	EX500, EX600 with touchtone keypad & battery JMNN4024A
M-EXD	EX560
M-ST	StarTac (Cellular)
M-PR	XTS2500, XTS3000, XTS1500, PR1500 with battery NNTN9857C, NNTN9858C, NNTN9895C, NNTN6263, NNTN7335A
M-BPR	BPR-40
M-NA	i600 with 12 hour battery
M-NB	i600 with 37 hour battery

M-NC i600 with 64 hour battery
M-ND i500 plus with battery NNTN8973A
M-NF i700 plus

RCA

RCA-950 BP950 with battery B950Li
M-HBR BR250 with battery B250

RELM/REGENCY

W-B MCPH-A, UC102, Utilicom, Microcom, HH469, RPL504, NCPU401
W-C Minicom Plus, MH200, MH220
P-D HX1000, HX1200
RPH RSP165, RPH606
RSP-A RSP400, RSP500
U-C Relm UC2200
S-F Relm WHS150
M-HU Relm PTV56
M-EXC Relm RPV3600 with battery BPR31700
R-MP MPV-08, MPU-08, MPV-32
R-PU RPU499A, RPV599A with battery BPRP1500
O-A Octagon WHS1
K-WNR RPN7500 with battery BPRP7117

REPCO

RHT RHT800
RPC PC400
RPX RPX
W-B SYN2100

RITRON

RT-A Jobcom, RT050, RT453 without touch-tone keypad
RT-ATT RT150 with touch-tone keypad
RT-B RTE-054, RTE-157, RTE450 without touch-tone keypad
RT-BTT RTE-054, RTE-157, RTE450 with touch-tone keypad
RT-C Patriot, JHX, RTX450
RT-D JMX150

SHINWA

SH-A SH404G, SH505KG, UR40P, UR50P, STS Satellite
GE-A GI-405, G2405

STANDARD

S-A 734, 735, 834, 835, 934

S-ATT	734, 735, 834, 835, 935 with touchtone keypad
S-B	GMR-2, 731, 831
S-C	730, 830
S-D	HX100
S-AX	HX300, HX320, HX326
S-X	HX340
S-XTT	HX340 with touchtone keypad
T-A	HX400
S-HX	HX500
S-HU	HX530U
S-F	HX240U, HX240V
S-FTT	HX240U, HX240V with touchtone keypad
S-FK	HX240U HX240V with cut out
S-G	HX581T
S-H	HX381 without touchtone keypad
S-I	HX255S, HX292
LMR-F	Tekk T-20
M-HU	Tekk T-80
NYPD-MT	PC150, TS200

TAIT

TP-91	TP-9100 with battery TPA-BA203 or TPA-BA206
TP-94	TP9435, TP9440 with battery T03-00011-AA4A

UNIDEN FORCE

F-A	APL56, APH56, APU44, FPH54, FPU44, FPU54, FPU250, FPU510
F-ATT	FPH56 with touchtone keypad
F-B	FPS-15-S
F-C	SPH Series, SPU Series
F-D	SPH155DT, SPU45KT

VERTEX

Y-F	VX500, VX537 with battery FNB-29, VX354 with battery FNB-V95
Y-G	VX10 1X, VX720 with battery FNB-V116
Y-H	VX510U
Y-HK	VX520 with battery FNB29 & with cutout ofr push-to-talk button
V-A	VX600U, VX900U
V-B	VX800
V-BR	VX800 with remote mike & battery FNB-V62Li
V-C	VX210A
V-D	VX160, VX180
M-HBR	VX920, VX921, VX924 with battery FNB-V86Li

M-X5000	VX920 Series, VX921 Series, VX970 Series, VX924, VX929 with battery FNB-V8Li
V-F	VXP824 with battery FNB-V87Li
V-G	VX720 with battery FNB-V116
V-XA	VXA-300 with battery FNB-83, Pilot III
V-X35	354 with battery FNB-V96Li

WILSON

W-B	Minicom, HH Series
W-C	Minicom Plus, NH200 MN220
W-D	T150MX

YAESU

Y-A	FTC2203, FTC2205, FTC5203
Y-AK	FTC2003, FTC2005, FTC4703, FTC1123
Y-B	FT23R, FT73R without touchtone keypad, FTH2005, FTH2006, FTH2008, FTH7005, FTH7008, FTH7009
Y-BTT	FT23R, FT73R with touchtone keypad
Y-C	FTH2070
Y-D	FTH2009